

GSi Lumonics

**HPM10VM2
Hardware Manual
HPM10VM2 Scan Head**

60 Fordham Road
Wilmington, MA 01887

**GMAX™ SYSTEMS
MULTI-AXIS BEAM HANDLING**

P/N E40-21548
Rev. 1
GSILUMONICS 1999

TABLE OF CONTENTS

| | |
|---|----|
| 1. INTRODUCTION | 1 |
| 1.1 Warranty..... | 2 |
| 1.2 Customer Support | 3 |
| 1.3 Unpacking | 3 |
| 2. HPM10VM2 OVERVIEW | 5 |
| 2.1 Theory of Operation..... | 5 |
| 2.2 General Description | 6 |
| 2.3 Specifications..... | 7 |
| 3. SAFETY AND WARNINGS | 9 |
| 3.1 Laser Shutter Installation | 11 |
| 3.2 Installation Safety Requirements | 12 |
| 4. INSTALLATION | 13 |
| 4.1 Handling the XY10VM2 Scan Head Lens..... | 13 |
| 4.2 Mounting the XY10VM2 Scan Head..... | 14 |
| 4.3 HC/2 Card Installation | 15 |
| 4.4 Interconnections | 16 |
| 5. MAINTENANCE | 17 |
| 5.1 Lens / Protection Glass Cleaning | 17 |
| 5.1.1 Introduction..... | 17 |
| 5.1.2 Basic Cleaning Procedure | 17 |
| 5.1.2.1 Back-spatter / Burned-in Damage..... | 18 |
| 5.2 Mirror | 18 |
| 5.2.1 Cleaning Procedure | 18 |
| 6. TROUBLESHOOTING | 21 |
| 7. GLOSSARY | 23 |
| 8. APPENDIX A: Specifications | 25 |
| 8.1 HPM10VM2 Scan Head | 25 |
| 8.2 HPM10VM2 Scan Head Mirror..... | 26 |
| 8.3 HPM10VM2 Scan Head Pin Configurations | 27 |
| 9. APPENDIX B: Technical Outline Drawings | 29 |

High Performance Laser Scanning Module (HPM10VM2) Hardware Manual

1. INTRODUCTION

This manual details the instructions on how to install and operate hardware of the High Performance Laser Scanning Module (**HPM10VM2**). Included is information on setting up the hardware in preparation for your software commands, at which point you can refer to the proper software manual.

Be careful to observe the information in the Environmental Requirements section that alert you to the hazards and the laser beam path you can expect while running the **HPM10VM2**.

Many of the details in this manual refer to the **XY10VM2** Scan Head used within the **HPM10VM2** module. This is because the **XY10VM2** head is **extremely intricate**, and since it consists of the galvanometers that reflect the laser beam, it can be hazardous if certain precautions are not taken. Please be alert to the safety considerations and specific procedures regarding the **XY10VM2** head and the laser you are using.

Conventions

Throughout the manual you will see graphic icons representing pertinent information in the text. The purpose of these icons is to provide a visual convention to alert you of a stop in the flow of the manual, where an important note or safety hazard alert is posted.






NOTE is an important procedure you should be aware of before proceeding.

CAUTION alerts you of a potential danger to equipment or the user.

WARNING indicates an imminent danger to the user.

TIP and **REMINDER** are helpful hints to procedures listed in the text.

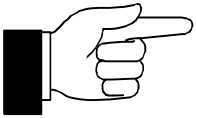The conventions are listed as follows, showing both the text and the picture you will see.
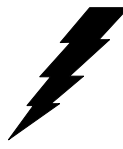
| NOTE | CAUTION | TIP | WARNING | REMINDER |
|---|---|--|---|---|
|  |  |  |  |  |

GMAX, HC/2, HCI, PC-MARK MT, HPM and HPLK are trademarks of GSI Lumonics.

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corporation. HP is a registered trademark of Hewlett-Packard Company.

1.1 Warranty

GSI Lumonics (GSLI) warrants this product to be free from defects in materials and workmanship for 12 months from the date of shipment. GSLI will, at its option, repair or replace the product if it is defective within the warranty period and returned, freight pre-paid, to a service center designated by GSLI.

GSI Lumonics requests that customers obtain a Return Authorization Number prior to returning units, and that they carefully pack units in their original packing or equivalent.

Under warranty, GSLI is not obligated to repair damage to any units resulting from the following conditions (customers are responsible for defining which conditions are applicable to their product):

- a) Personnel other than GSLI representatives attempting to repair or service the product.
- b) Improper use of the equipment.
- c) Connecting the product to incompatible equipment.
- d) Personnel other than GSLI representatives modifying the product.
- e) Scratches and chips on any optical surface after three weeks from the date of receipt.
- f) Damage to any optical surface from improper handling or cleaning procedures. This applies specifically to those items subjected to excess laser radiation, contaminated environments, extreme temperature or abrasive cleaning.

Customers assume all responsibility for maintaining a laser-safe working environment. OEM customers must assume all responsibility for **CDRH** (Center for Devices and Radiological Health) certification.



NOTE

There is no implied warranty of fitness for a particular purpose, and GSLI is not responsible for consequential damages. Individual components manufactured by GSLI or others may be covered by their own warranties. Refer to the appropriate manuals for this information.

1.2 Customer Support

GSI Lumonics has support services available to you concerning problems with either the product or manual you are using.

Before calling for assistance, please make sure you refer to any appropriate sections in the manual that may answer your questions. The “Technical Outline Drawings” in APPENDIX B may be particularly helpful. If you need further assistance:

The customer service personnel will be able to give you direct assistance and answers to your questions.



| | |
|------------------------------|--|
| U.S. (Massachusetts): | 978-661-4300 (In the U.S.) 01-978-661-4300 (Outside the U.S.) |
| Germany (Munich): | +49 89 899134-0 |
| Italy (Monza): | +39 39 2025387 |
| UK (Banbury): | +44 132-787-2424 |
| Japan (Tokyo): | +81 3 3406 7990 |

... ask for the GMAX Customer Service Department

1.3 Unpacking

A packing list is included in the shipment that details the exact items shipped.


- CAREFULLY unpack the contents from the box.
- Save shipping container and packaging material in case you need to return unit for service.
- Check contents of the box against the packing list to assure all parts have been received.
- Inspect each item to assure it is not damaged.

2. HPM10VM2 OVERVIEW

2.1 Theory of Operation

The High Performance Laser Scanning Module (**HPM10VM2**) is a multi-purpose-designed module. The module consists of 2 galvanometer scanners (X and Y), optics (flat field lens) and integrated driver electronics all enclosed in a black anodized aluminum case.

*X and Y Galvanometric
Scanners with a Flat
Field Lens*

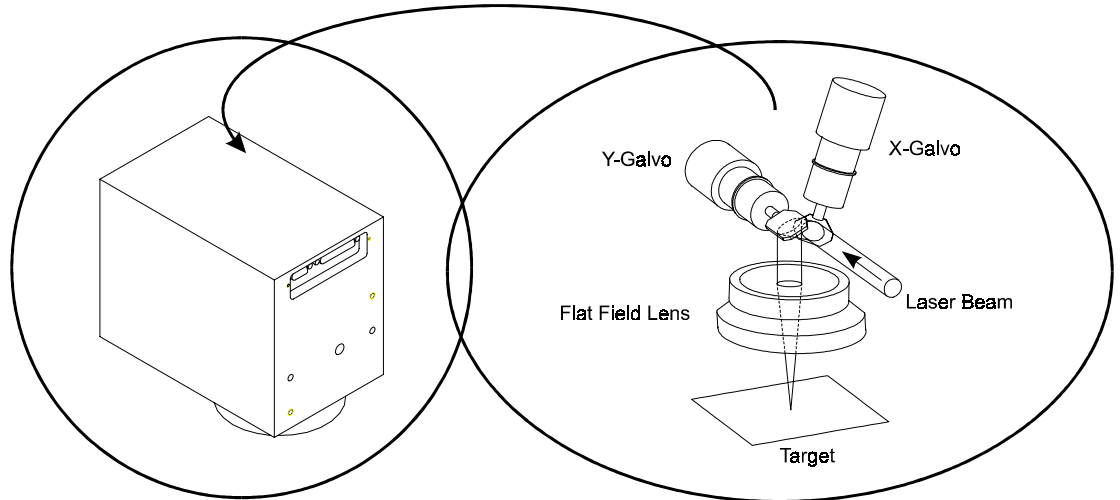


GSI Lumonics' 2-mirror, 2-axis galvanometer Scan Heads provide the capability of deflecting optical beams in an XY manner for all possible laser applications. The synchronized actions of two galvanometer servo-controlled turning mirrors direct the laser beam to specific locations on a target material surface in both the X and Y directions.

PC-MARK MT and **JOB EDITOR** (optional), sophisticated laser control software, controls the motion of the galvanometer according to the design selected by the user. The two circuit boards (galvanometer drivers) located in the Scan Head are connected to the computer controller through the **HC/2**. A 25-pin inter-connecting cable links the drivers to the **HC/2**.

2.2 General Description

The **HPM10VM2** is a basic building block for the construction of a laser beam positioning system. It is intended for use by OEM customers, integrators, and sophisticated end-users. It consists of a purposely designed integrated deflection head with a PC based hardware and software package. The following block diagram shows the typical **HPM10VM2** system components provided by GSI Lumonics.

Block Diagram of a Typical HPM10VM2 System

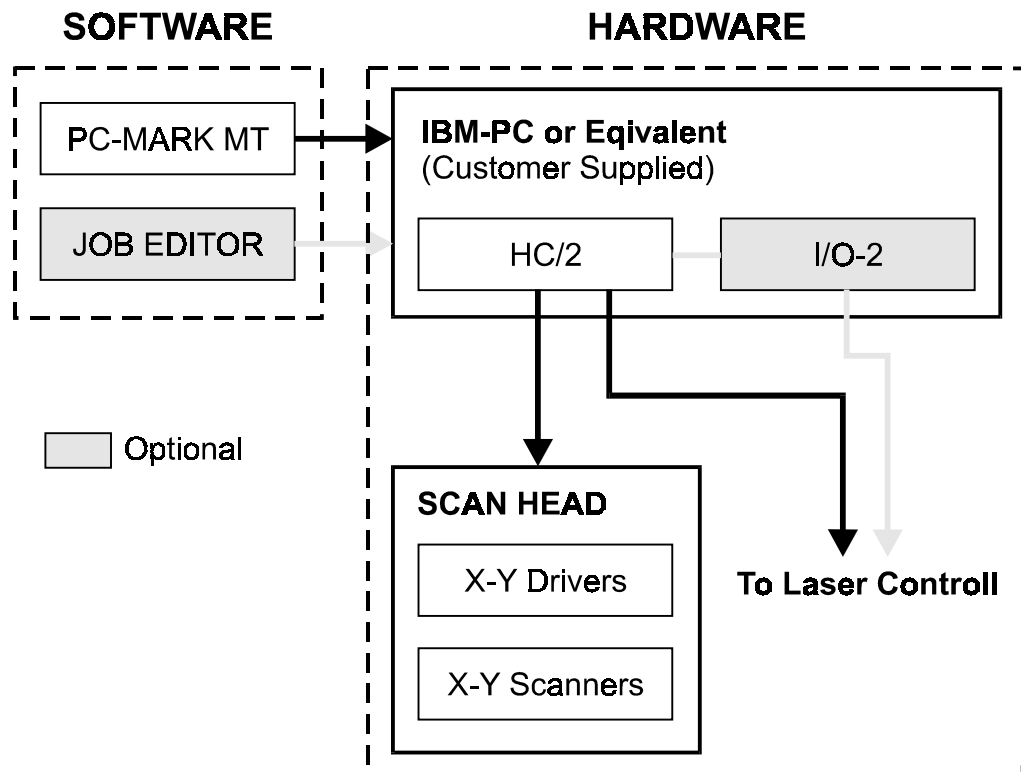

GSI Lumonics provides the following items that make up the full HPM10VM2 package:

- **XY10VM2** Scan Head with 2 galvanometer scanners, optics and integrated driver electronics.
- PC-installed **HC/2** (**I/O-2** add-on control card optional).
- 10 ft. digital interface cable.
- Software package **PC-MARK MT** (multitasking), (**JOB EDITOR** optional).
- Documentation.

Overview

The Customer must provide:

- A laser.
- A computer (IBM PC compatible).
- A method of mounting the **HPM10VM2**.
- Power Supply with the following specifications:

Power Supply Specifications

| | |
|---------|--------------------|
| Voltage | ±15 V to ±18 V |
| Current | 2 A (10 A Peak) |
| Ripple | ≤ 100 mV |
| Noise | ≤ 0.5% DC to 30MHz |

Minimal Computer Requirements

The minimal configuration for the computer depends on your **HC/2**. For more information see the appropriate manuals.

2.3 Specifications

Environmental Requirements

| | |
|--------------------------------|----------------|
| Storage Temperature: | -10°C to +60°C |
| Minimum Operation Temperature: | +15°C |
| Maximum Operating Temperature: | +34°C |
| Humidity: | Non-condensing |

XY10VM2 Scan Head

Specifications and Pin Configurations are located in “APPENDIX A: Specifications”.

Mirrors

Specifications are located in “APPENDIX A: Specifications”.

3. SAFETY AND WARNINGS

The United States Food and Drug Administration, through the Center for Devices and Radiological Health (CDRH), has promulgated regulations (21 CFR parts 1000 and 1040) controlling the safety of lasers and laser products for sale or manufacture in the United States. GSI Lumonics' **XY Scan Heads** are regulated by the CDRH.

This section is a guide to the specific areas of this product and to the manual(s). Pay particular attention to CDRH compliance information.

*User
Responsibilities*

GSI Lumonics' **XY Scan Heads** are designed to provide maximum flexibility and ease of use. Such a design inherently requires the user to assure the overall safety of the configuration in use.

It is the user's responsibility to insure that:

- 1) Only lasers certified to comply to CDRH regulations are used with GSI Lumonics' **XY Scan Heads**.
- 2) Certified lasers contain features to assist in their safe usage. These protective features and the protective features within the GSI Lumonics **XY Scan Head** should not be defeated.



CAUTION

Prior to operating any configuration of the GSI Lumonics XY Scan Heads, you must make a thorough analysis of system safety. Key information for this purpose is contained in this manual. You would thoroughly familiarize yourself with all this information before proceeding.

Laser Hazard Analysis

A full description of laser hazard analysis is beyond the scope of this manual. A good technical survey of laser safety requirements can be found in **ANSI Z136.1, "American National Standard For the Safe Use of Lasers"**. This is available from:

*American National Standards Institute, Inc.
1430 Broadway
New York, New York 10018*

Among the many other sources of laser safety information, the following institution offers several excellent publications.:

*The Laser Institute of America
5151 Monroe Street, Suite 118W
Toledo, Ohio 43623*

Final analysis of all safety features should be made by your Laser Safety Officer or a competent specialist in this field.

The first consideration in a safety analysis is the laser mated to the GSI Lumonics **XY Scan Head**. The hazard level of the laser is roughly indicated by the Laser Class label that is on the device. A brief description of the radiation classes are shown in the following table.

Note that, besides radiation, lasers may present other hazards, e.g.; electric shock or creation of poisonous fumes.

Classes and Characteristics of Lasers

| LASER CLASS | DESCRIPTION |
|-------------------|---|
| Class I | Lasers are not considered to be hazardous. |
| Class IIa | Lasers are hazardous if viewed for periods greater than one thousand seconds. |
| Class II | Lasers are chronic viewing hazards. |
| Class IIIa | Lasers may represent acute, intrabeam viewing or chronic or acute viewing hazards when viewed with optical instruments. |
| Class IIIb | Lasers are an acute hazard to skin and eyes from direct radiation. |
| Class IV | Lasers are an acute hazard to skin and eyes from direct or scattered radiation. |




CAUTION

Do not use equipment outside of these ranges, as additional hazards may result.

Because we do not determine the laser used with our product, all GSI Lumonics end-user **XY Scan Heads** are labeled at the highest hazard level (Class IV). You should obtain information on output power or energy, wavelength(s) of output, duration of pulse, beam size and beam divergence from the manufacturer of the laser you are using.

The wavelength and power of the laser actually used should be written on the warning logo type label, Position 2. (See Section page 33699 and 33700 of the Federal Register, Appendix B). Be sure to use a permanent, indelible ink.

Class IV Warning Label

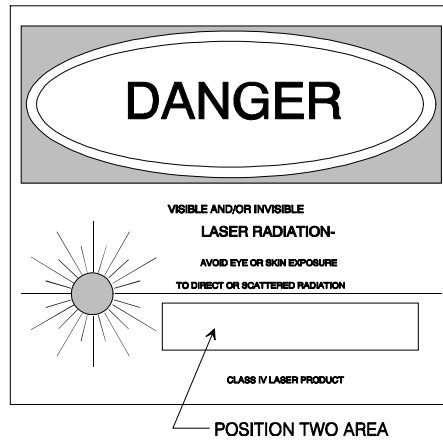

The Federal Register Rules and Regulations, Vol. 50, No. 161, dated Tuesday, August 20, 1985, contains the performance standards adopted by the Food and Drug Administration (FDA) which gives detailed information regarding the determination of laser classification and labeling. The ANSI and the FDA classifications are not the same. For purposes of labeling, use only the FDA classifications. If your laser falls in a classification below Class 4, replace the warning label type with the correct label and appropriate classification. The factory provides alternate labels upon request.



REMEMBER

The GSI Lumonics **XY Scan Heads** provide you with the ability to aim the laser beam over a roughly pyramidal volume. The divergence of the focused beam beyond the focal point, which is a function of the lenses selected and their position, can cause radiation to exit the pyramid. When analyzing safety, you must consider all regions within this aiming pyramid, the divergent beam, and the effects of all focal possibilities in the zone of hazard. Reflections must also be considered.


3.1 Laser Shutter Installation

The laser attenuator (shutter) is not included with the **XY Scan Head**. Because each laser is unique, it is the user's responsibility to insure that such a device is incorporated in the installation in conformance with CFR regulations (1040.10[f][6]), which reads as follows:


A beam attenuator is required on Class II, IIIa, IIIb and IV laser systems. The beam attenuator is a mechanical or electrical device such as a shutter or attenuator that blocks emission. The beam attenuator blocks bodily access to laser radiation above Class I limits without the need to turn off the laser. The beam attenuator must be available for use at all times during operation. Power switches and key controls do not satisfy the attenuator requirement.



Laser Shutter Location Example in a HPLK System

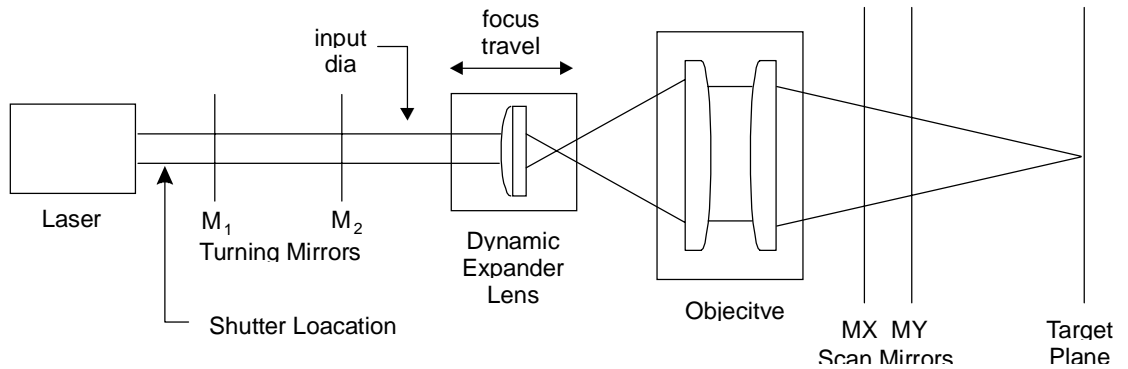


The beam shutter should be installed between the laser head and the Scan Head. The following figure shows the recommended location of the shutter.

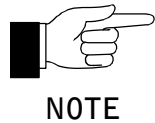

We strongly recommend that you specify a laser with a vendor-supplied shutter mechanism. If this is not possible, consult the laser vendor to design a proper safety shutter.

Laser Scanner Hazard Zones of an HPM Scan Head

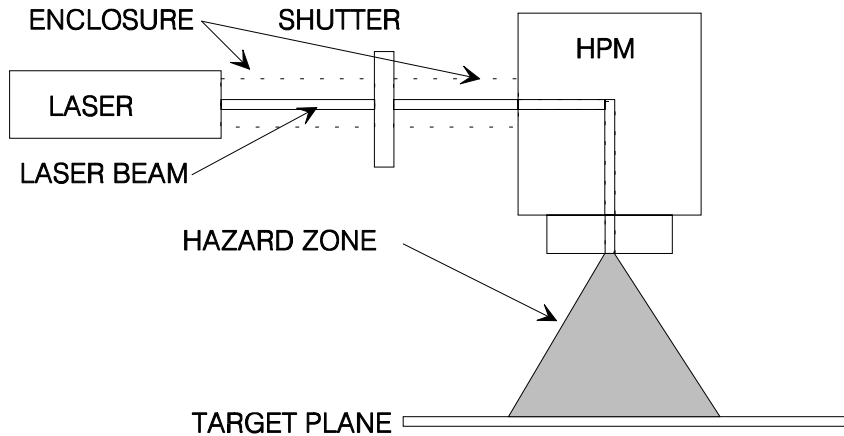

The figure shows the laser's internal and external optical path towards the target plane, specifically where the hazard zones are located as the optical beam passes through as **HPM Scan Head**.

3.2 Installation Safety Requirements

Because of the possible hazard increase of scanning stopping or slowing to an unsafe velocity, it is required that the controller software shuts down the laser power (a scanning safeguard).

In all cases, we recommend that you fully enclose and interlock the zone of hazard for your application to prevent possible opening while the laser is energized. When laser radiation exceeding Class 1 levels may exit the enclosure, you must have suitable protection for eyes available.



NOTE

At no time should you stare into the beam, place any parts of your body in the beam path, or expose yourself to reflections of powerful beams. You should use only a Class 1 HeNe Laser for alignment. If this is not possible, you should use the available laser's lowest power setting and remote beam sensing technique.



CAUTION

Using optical instruments with this product increases eye hazard.

Additional Safety requirements may be applicable during initial alignment of the optical system. Refer to Section, "Safety and Warnings", Section 3.

GSI Lumonics XY Scan Heads are labeled in conformance to the requirements of 21 CFR parts 1000 and 1040.

4. INSTALLATION

Installation Safety Requirements



WARNING

We recommend that you fully enclose and interlock the zone of hazard for your application to prevent possible opening while the laser is energized. If laser radiation exceeding Class 1 levels may exit the enclosure, you must have available suitable protection for your eyes.


At no time should you stare into the beam, place any parts of your body in the beam path, or expose yourself to reflections of powerful beams. You should use only a class I HeNe laser for alignment. If this is not possible, you should use the available laser's lowest power setting and remote beam sensing technique. Using optical instruments with this product increases eye hazard.

Additional Safety requirements may be applicable during initial alignment of the optical system. See the next section for specific safety information. GSI Lumonics **XY10VM2** Scan Heads are labeled in conformance to the requirements of 21 CFR parts 1000 and 1040.

4.1 Handling the HPM10M2 Scan Head Lens

If you have not purchased a lens with your **HPM10VM2**, and you are installing your own lens, or you are removing a lens, follow the steps outlined below for handling and installing a lens. .

*Lens Mounting
YAG Lens Example
(Complete Assembly)*

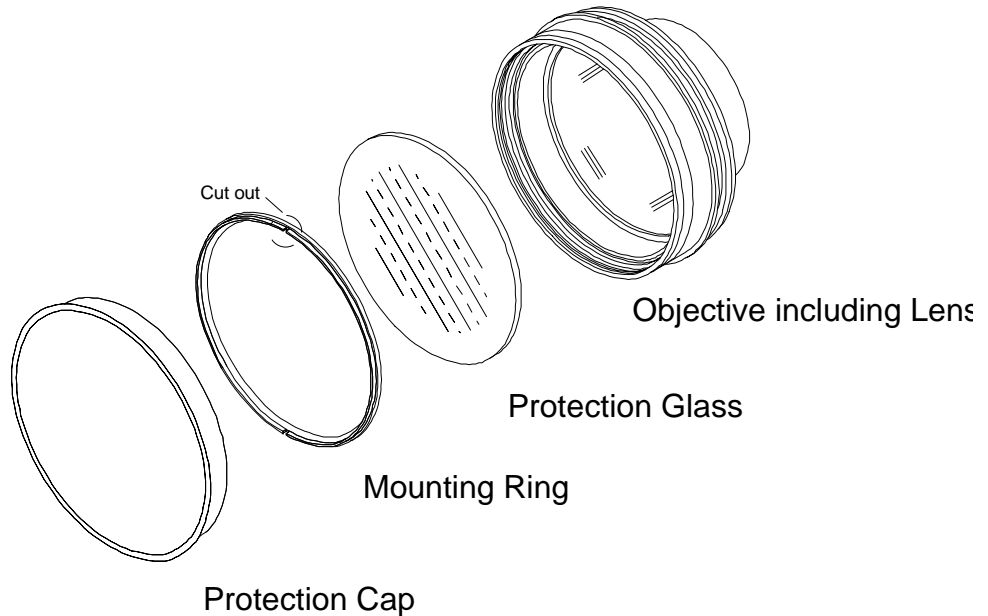

CAUTION

Make sure that the laser is off before performing any inspections! Wear finger cots or cotton gloves when handling optics for inspection.

To Install a Lens:


- 1) Before installing a lens onto the Scan Head, visually inspect the lens surface for any evidence of damage, i.e.; cracked lens, cracks on the edges of the lens, scratches on the lens surface.
- 2) If the lens is dirty, clean the lens per the lens cleaning instructions in the **MAINTENANCE**. Do not rest any objects on top of the lens as this may result in damaging the lens.
- 3) If there is a protection glass, make sure it is clean, then place it over the front of the lens. Screw the Mounting Ring into the lens flange until it is tight over the Protection Glass. Hand-fit lens protection cap onto the lens assembly.
- 4) The lens assembly is screwed into the Scan Head. Carefully and securely mount the lens to the **XY10VM2** Scan Head. (DON'T CROSS-THREAD THE LENS ASSEMBLY). The lens should be screwed on completely.

To Remove a Lens:

Reverse the above procedure.

4.2 Mounting the HPM10VM2 Scan Head

Scan Head Outline

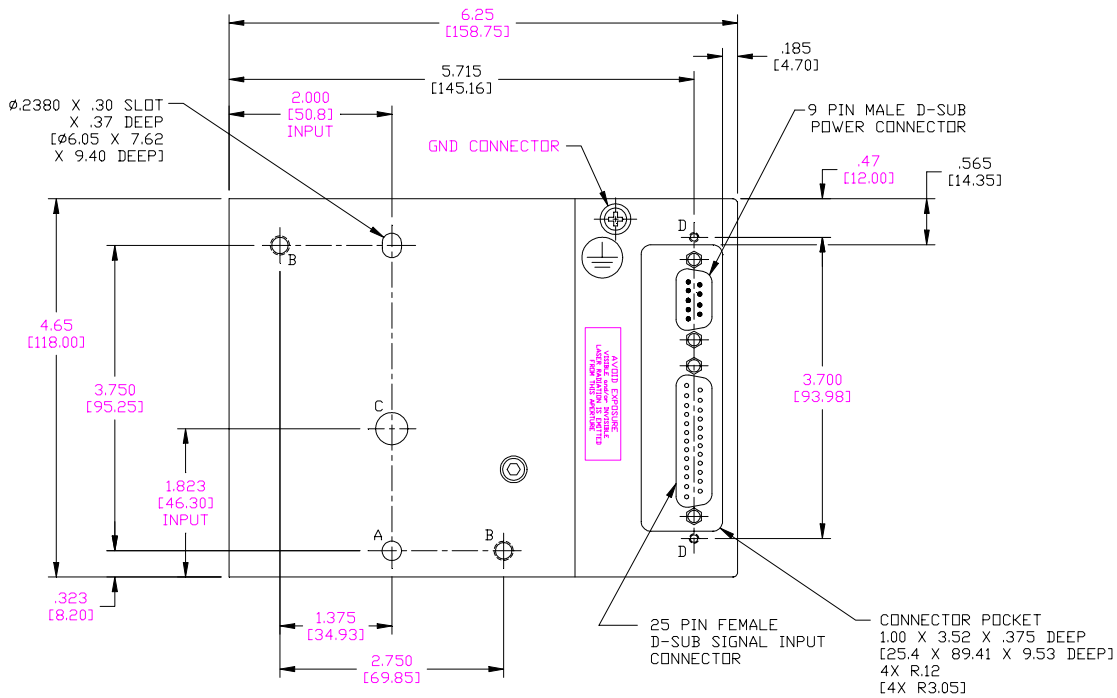

| SYM | QTY | DESCRIPTION | DEPTH |
|-----|-----|--|------------|
| A | 3 | ∅.2370/2380 [6.01/6.04] DO NOT BREAK THRU CHAMFER LEAD IN 45° X ∅.25 [∅6.35] | .37 [9.40] |
| B | 4 | M6 X 1-6H DO NOT BREAK THRU | .37 [9.40] |
| C | 1 | ∅.394 [∅10.00] THRU | |
| D | 2 | M3 | .35 [8.89] |
| E | 4 | M3 THRU | |

HPM10VM2 Mounting


- 1) The Scan Head requires a mounting flange that will match the mounting pins and holes on the **Beam Input** side of the assembly. The previous figure and the outline drawings, in Appendix C, can be used to determine the dimensions for manufacturing a mounting flange.
- 2) Line up the **HPM10VM2** Scan Head module dowel holes with the dowel pins which protrude from your mounting flange.
- 3) Install the **HPM10VM2** Scan Head module onto the pins.
- 4) Insert two M6 size buttonhead screws into the holes of the mounting flange. The screw length should be long enough to provide three or more full turns into the tapped holes.
- 5) Using an allen wrench, tighten the two screws. Alternate tightening the two screws so that the **HPM10VM2** Scan Head comes together evenly with the mounting flange.

4.3 HC/2 Card Installation

The purpose of the **HC/2** is to provide a hardware link between the CPU and the **HPM10VM2**. Both are cards designed to be installed into a PC type computer. For more information and installation procedure refer to the relevant manual.

4.4 Interconnections

The following figure depicts the connection of the **HPM10VM2** Scan Head and the **HC/2** to the various other Customer-supplied parts of the system.

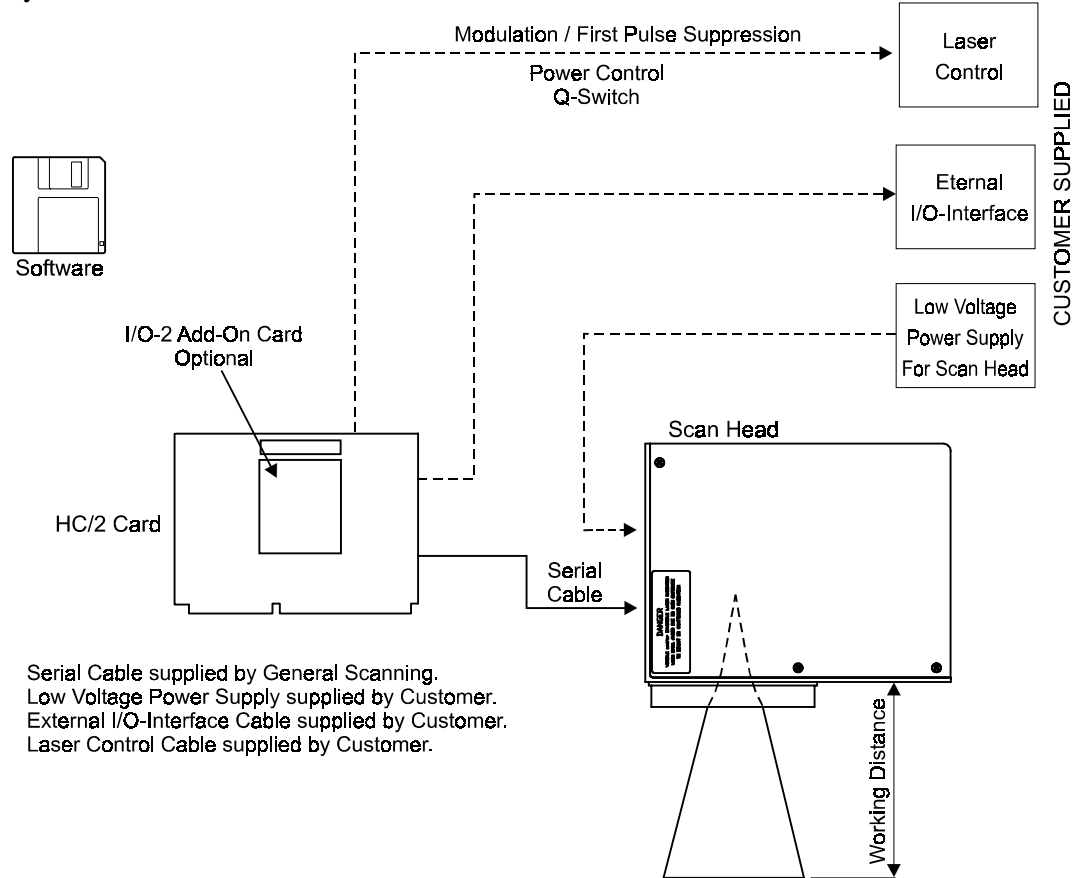

HPM10VM2 Connected to a System

This completes the installation of the **HPM10VM2** system. Install your software onto the computer. Refer to the software manuals for software installation.

5. MAINTENANCE

*Cleaning the
HPM10VM2 Scan
Head*

The HPM10VM2 Scan Head assembly is sealed. The housing can be cleaned with a slightly dampened cloth. If a cleaning agent is necessary, use only a small quantity of non-aggressive cleanser (e.g. soap).

5.1 Lens / Protection Glass Cleaning

*Cleaning the Lens /
Protection Glass*

Special care should be exercised in cleaning a lens that does not have a protection window

5.1.1 Introduction

Optical materials and coatings are relatively soft materials and incorrect cleaning techniques can lead to surface damage and drastically reduced component lifetime.

Surface contamination can be of different kinds:

- Dust, grease and other air-borne particles.
- Products from the laser process - back spatter or burned-in particles.
- Organic contamination caused by talking, coughing or sneezing near the exposed optical surface.

The primary goal is to avoid any contamination by appropriate protection of the exposed optics!

 
The basic cleaning technique described here is intended to help prolong the component lifetime by minimizing surface damage during the cleaning process.



CAUTION

Not following this technique can cause severe damage to the optical components.

5.1.2 Basic Cleaning Procedure

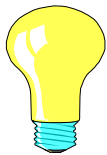

TIP

Optical components should always be handled using suitable gloves, or finger-cots, in order to avoid finger prints.

1. Surface dust and loose particles must be blown from the component using an air bulb, ideally one with a non-return valve.
2. Always use cloth or cotton buds which are moistened with **pure** acetone. Never use cleaning materials which are dry.
3. Use a soft, lint-free lens cloth. The cloth has to be moistened with pure acetone, laid gently on one edge of the component and drawn in a continuous movement to the opposite edge.

DO NOT APPLY PRESSURE. DO NOT RUB!



CAUTION

Rubbing may cause permanent surface marks.

4. Blow away residue liquid in one direction with an air bulb.
5. Make sure that no visual contaminants remain on the optical surface.
6. Stubborn stuck-on particles may require an attempt to dislodge them by the local application of a cotton bud moistened with pure acetone.
7. Finish off per (3) above.
8. Organic contamination cannot usually be removed using solvents such as acetone. The residue should be removed using distilled water and a lens cloth prior to finishing per (3) above.

5.1.2.1 Back-spatter / Burned-in Damage

Some forms of back-spatter can be reduced or removed using the basic cleaning process.

In general, however, metallic back-spatter or laser-burned-in damage cannot be removed by cleaning.

If the extent of the contamination is sufficient to cause process problems (e.g.: thermal lensing), then consideration should be given to replacement of the contaminated component.

5.2 Mirror



CAUTION

Never touch the coating of the mirror to avoid any damages on the surface.

There are times, however, when cleaning the mirror becomes a necessity. Follow exactly the next section "Cleaning Procedure".

5.2.1 Cleaning Procedure

Although the mirrors can be replaced by the user, we do **not recommend** you do so. Furthermore, **GSI Lumonics does not recommend cleaning front surface mirrors.** Mirrors damaged by cleaning are not included under the warranty. The surface of these mirrors damages easily. It is difficult to prevent hard dust particles from being entrained in the process and causing scratches. In many cases, small defects in the mirror's surface may be less harmful than the surface damage resulting from continued cleaning. It requires special equipment typically not available to customers.

There are times, however, when cleaning the mirror becomes a necessity, e.g. stains such as fingerprints must be removed immediately to prevent permanent etching of the reflective surface. The information below includes general recommendations for those special occasions when mirrors must be cleaned.

Remove lint from mirrors with a jet of low pressure clean air. Blowing on front surface mirrors deposits moisture that may stain the finish.

Removing Dust

Removing Stains

A thin overcoating of silicon monoxide protects most mirrors from oxidation. Like many optical coatings, it is easily damaged when attempts are made to clean the mirror surface with a dry tissue.

The safest method of cleaning is to place a piece of lens tissue on the mirror surface and wet it with reagent grade (highly pure) alcohol or acetone (If you use acetone, take precautions regarding possible health and fire hazards). Grasp an overhanging corner of the tissue and gently agitate it several times, then slide the tissue off. This should remove the problem blemishes.



CAUTION

Do not let solvent enter the bounding zone of the mirror.



NOTE

Note that the mirror is not rubbed.

If the mirror surface is still contaminated, use a highly pure solvent such as alcohol or acetone and generously wet the mirror surface with a **sterile** cotton swab or lens tissue. Gently wipe the dirty areas. Turn your cotton swab or tissue with each stroke so that a clean area is exposed.



CAUTION

Do not let solvent enter the scanner bearings. When wetting the mirror's surface, hold the scanner at an angle so that the liquid does not wet the scanner. If any solvent is found in the bearings of the scanner, the warranty is voided.

6. TROUBLESHOOTING

If you encounter problems with your **HPM10VM2**, you can check the following matrix. If you cannot solve the problem, contact **GSI Lumonics** for further assistance.

| PROBLEM | PROBABLE CAUSE | POSSIBLE SOLUTION |
|--|----------------------------------|--|
| 1. Decrease in marking quality. | 1. Dirty protection glass. | 1. Clean glass per instructions in Maintenance Section. |
| | 2. Marking parameters changed. | 1. Check PC-MARK MT and JOB EDITOR parameters. |
| | 3. Drop in output power. | 1. Check laser power. |
| 2. Laser will not mark when ordered by computer. | 1. Laser modulation malfunction. | 1. Check connections between HC/2 and laser controller. 2. Check connections between laser controller and laser. |
| | 2. No power to galvanometers. | 1. Check power connections to scanning head. |
| | 3. HC/2 malfunction. | 1. Verify that HC/2 connections and installation are correct. |

7. GLOSSARY

- Flat Field Lens:* A wavelength specific lens focuses the laser to a small spot and maintains this spot size over the entire target field.
- Galvanometer:* A scanner with limited rotation magnetic torque motor with position feedback. The galvanometer (galvo) rotates a mirror to direct the laser beam.
- HC/2:* A PC based board that provides the hardware link between your PC and the XY Industrial Scan Head. I/O for laser control and parts handling are additional features. The HC/2 is fully compatible with PC-MARM MT (multitasking) software.
- HPGL:* HP® Graphics Language, a graphics format which PC-MARK MT can translate into vector data for scanning.
- HPM:* (High Performance Modules) Complete beam position packages consisting of the XY Industrial Scan Head, PC resident HC/2 card, PC-MARK MT software and interconnects.
- I/O-2:* An add-on board available as an option to the HC/2 card. Features include opto-isolated programmable I/O ports, analog laser power control and first pulse suppression.
- PC-MARK MT:* (multitasking) A powerful front-end macro command language. PC-MARK MT accepts application commands to place text and graphics in the marking field and translates them into the appropriate lists of vectors. Users may also write their own PC-MARK MT programs in any one of many popular software languages. MMCL is utilized as the link to the HC/2 card.
- JOB EDITOR:* A menu-driven application program of PC-MARK MT that provides an extensive graphics user interface and file management. It allows the user to manipulate HPGL based graphics with an accurate real preview of one's job.

8. APPENDIX A: Specifications

8.1 HPM10VM2 Scan Head

| Laser Type | YAG | | | CO ₂ | |
|--|----------------|----------------|----------------|-----------------|----------------|
| Wavelength | 1,064 nm | 1,064 nm | 1,064 nm | 10,600 nm | 10,600 nm |
| Objective (f in mm) | f = 100 | f = 163 | f = 254 | f = 100 | f = 200 |
| Standard Field Size (mm ²) | 55x55 | 115x115 | 180x180 | 60x60 | 120x120 |
| Maximum Practical Field Size (mm ²) ¹ | 70x70 | 115x115 | 180x180 | 60x60 | 120x120 |
| Spot Size TEM ₀₀ (μm) | ~23 | ~31 | ~41 | ~230 | ~380 |
| Working Distance (mm) ² | 108 | 207 | 338 | 76 | 190 |
| Resolution (μm) ³ | < 4 | < 7 | < 11 | < 4 | < 8 |
| Writing Speed (m/s) ⁴ | > 1.8 | > 3 | > 4.5 | > 1.8 | > 3.5 |
| Uncalibrated Non-Linearity (maximum %) ⁵ | ±0.6 | ±0.6 | ±0.6 | ±1.0 | ±1.0 |
| Temperature Drift (maximum μm/°C) ⁶ | 7.7 | 12.7 | 19.8 | 6.6 | 13.2 |
| Aperture (mm) | 9.5 | 9.5 | 9.5 | 9.5 | 9.5 |
| Scan Angle (maximum) | ±20° | ±20° | ±20° | ±20° | ±20° |
| Power Capability, cw (W/cm ²) ⁷ | 500 | 500 | 500 | 500 | 500 |
| Power Capability, 100 ns pulsed (MW/cm ²) | 100 | 100 | 100 | 400 | 400 |
| Protection Glass | yes | yes | yes | none | none |
| Scan Head Size ⁸ (height x length x width in mm) | | | | | |
| Weight (kg) ⁹ | | | | | |
| Surface Finish | black anodized | black anodized | black anodized | black anodized | black anodized |
| Protection | IP40+ | IP40+ | IP40+ | IP40+ | IP40+ |

¹ Some beam clipping can occur

² Distance between edge of head and working field

³ Better than 2 bit in a 16-bit system (±0.003 %)

⁴ Actual writing speed depends on accuracy and feature sizes (jump speeds can be much higher)

⁵ Includes lens distortion; non-linearity can be improved by an order of magnitude by using individual calibration methods in software

⁶ Temperature drift is maximum 0.011 %/°C and typ. 0.008 %/°C

⁷ Determined by the mirror specifications

⁸ Scan head basic dimensions without the lenses: Height = 175 mm, Length = 162 mm, Width = 183 mm

⁹ Scan Head weight without lens: 4.5 kg



Non-lens mirror configuration options: Argon, Argon (HP), UV and Visible

8.2 HPM10VM2 Scan Head Mirror

| | LASER TYPE | | | | | |
|--|----------------------------------|---------------------|--------------------------------|-------------------------------------|---|-------------|
| | YAG | CO2 | ARGON | ARGON (HP) | UV | VISIBLE |
| Wavelength | 1,064 nm | 10,600 nm | 488-514 nm | 488-514 nm | 325-360 nm | 450-700 nm |
| Coating | Dielectric | Dielectric on Metal | Dielectric | Dielectric | Dielectric | Durable Ag |
| Reflection (min.) @ Wavelength (nm) | 99.5% @ 1,064 80.0% @ 450-650 | 99.5% | 98.0% @ 480-514 50.0% @ 633 | 99.5% | 98.0% @ 325-350 95.0% @ 350-360 45.0% @ 633 | 96.0% |
| Flatness @ 633 nm | $\lambda/4$ | $\lambda/4$ | $\lambda/4$ | $\lambda/4$ | $\lambda/4$ | $\lambda/4$ |
| Power Capability, cw (W/cm²) | 500 | 500 | 100 | 5 MW/cm ² | | 10 |
| Power Capability, 100 ns pulsed (MW/cm²) | 100 | 400 | 80 | 2 GW/cm ² (10 ns pulsed) | | N/A |
| Surface Quality (Scratch/Dig) | 40/20 | 40/20 | 40/20 | 40/20 | 40/20 | 40/20 |

See your GSI Lumonics sales representative for more details.

8.3 HPM10VM2 Scan Head Pin Configurations
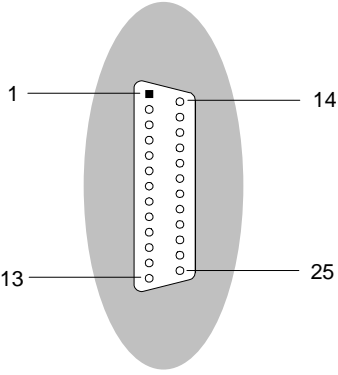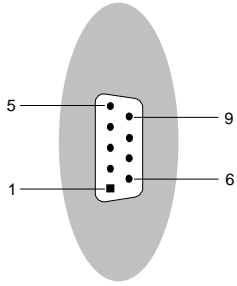
| INTERFACE | PIN | ASSIGNMENT |
|---|---|--|
|  <p data-bbox="565 1079 938 1136">25 Pin D-Sub female connector for HC/2</p> | <p data-bbox="1019 485 1052 506">1</p> <p data-bbox="1019 520 1052 541">14</p> <p data-bbox="1019 556 1045 577">2</p> <p data-bbox="1019 592 1052 613">15</p> <p data-bbox="1019 627 1045 648">3</p> <p data-bbox="1019 663 1052 684">16</p> <p data-bbox="1019 699 1045 720">4</p> <p data-bbox="1019 735 1052 756">17</p> <p data-bbox="1019 770 1045 791">5</p> <p data-bbox="1019 806 1052 827">18</p> <p data-bbox="1019 842 1045 863">6</p> <p data-bbox="1019 877 1045 898">19</p> <p data-bbox="1019 913 1045 934">7</p> <p data-bbox="1019 949 1045 970">20</p> <p data-bbox="1019 984 1045 1005">8</p> <p data-bbox="1019 1020 1045 1041">21</p> <p data-bbox="1019 1056 1045 1077">9</p> <p data-bbox="1019 1092 1045 1113">22</p> <p data-bbox="1019 1127 1045 1148">10</p> <p data-bbox="1019 1163 1045 1184">23</p> <p data-bbox="1019 1199 1045 1220">11</p> <p data-bbox="1019 1234 1045 1255">24</p> <p data-bbox="1019 1270 1045 1291">12</p> <p data-bbox="1019 1306 1045 1327">25</p> <p data-bbox="1019 1341 1045 1362">13</p> | <p data-bbox="1092 485 1214 506">SENDCK -</p> <p data-bbox="1092 520 1222 541">SENDCK +</p> <p data-bbox="1092 556 1182 577">SYNC -</p> <p data-bbox="1092 592 1190 613">SYNC +</p> <p data-bbox="1092 627 1247 648">CHANNEL X -</p> <p data-bbox="1092 663 1255 684">CHANNEL X +</p> <p data-bbox="1092 699 1247 720">CHANNEL Y -</p> <p data-bbox="1092 735 1255 756">CHANNEL Y +</p> <p data-bbox="1092 770 1369 791">RESERVED FOR Z AXIS</p> <p data-bbox="1092 806 1369 827">RESERVED FOR Z AXIS</p> <p data-bbox="1092 842 1206 863">STATUS -</p> <p data-bbox="1092 877 1214 898">STATUS +</p> <p data-bbox="1092 913 1133 934">NC</p> <p data-bbox="1092 949 1133 970">NC</p> <p data-bbox="1092 984 1133 1005">NC</p> <p data-bbox="1092 1020 1133 1041">NC</p> <p data-bbox="1092 1056 1133 1077">NC</p> <p data-bbox="1092 1092 1133 1113">NC</p> <p data-bbox="1092 1127 1133 1148">NC</p> <p data-bbox="1092 1163 1133 1184">NC</p> <p data-bbox="1092 1199 1133 1220">NC</p> <p data-bbox="1092 1234 1133 1255">NC</p> <p data-bbox="1092 1270 1133 1291">NC</p> <p data-bbox="1092 1306 1133 1327">NC</p> <p data-bbox="1092 1341 1133 1362">NC</p> |
| INTERFACE | PIN | ASSIGNMENT |
|  <p data-bbox="581 1688 922 1745">9 Pin D-Sub male connector for power supply</p> | <p data-bbox="1019 1440 1045 1461">5</p> <p data-bbox="1019 1476 1045 1497">9</p> <p data-bbox="1019 1512 1045 1533">4</p> <p data-bbox="1019 1547 1045 1568">8</p> <p data-bbox="1019 1583 1045 1604">3</p> <p data-bbox="1019 1619 1045 1640">7</p> <p data-bbox="1019 1654 1045 1675">2</p> <p data-bbox="1019 1690 1045 1711">6</p> <p data-bbox="1019 1726 1045 1747">1</p> | <p data-bbox="1092 1440 1157 1461">+VSS</p> <p data-bbox="1092 1476 1157 1497">+VSS</p> <p data-bbox="1092 1512 1157 1533">+VSS</p> <p data-bbox="1092 1547 1141 1568">GND</p> <p data-bbox="1092 1583 1141 1604">GND</p> <p data-bbox="1092 1619 1141 1640">GND</p> <p data-bbox="1092 1654 1149 1675">-VSS</p> <p data-bbox="1092 1690 1149 1711">-VSS</p> <p data-bbox="1092 1726 1149 1747">-VSS</p> |

9. APPENDIX B: Technical Outline Drawings

This Appendix includes the following outline drawings:

DRAWING TITLE
Outline HPM10VM2

DRAWING NUMBER
ECD-20237

INDEX

—C—

Computer Requirements, 7
Customer Support, 3

—F—

Federal Register, 10

—G—

Glossary, 23

—H—

HPM10VM2
 Definition, 5
 Interconnections, 16
 Troubleshooting, 21

—I—

Installation
 HC/2, 15

—L—

Laser
 Classes, 10
 Hazard Zones, 11
 Shutter Installation, 11
 Shutter Location, 11
 Warning Label, 10

Lens
 Cleaning, 17
 Mounting, 13

—M—

Maintenance
 HPM10VM2 Cleaning, 17
 Lens Cleaning, 17
 Mirror Cleaning, 18
 Protection Glass Cleaning, 17

Mirror
 Cleaning, 18

—P—

Power Supply
 Specifications, 7

Protection Glass
 Cleaning, 17

—S—

Specifications
 Environmental, 7
 Mirrors, 7, 26
 Power Supply, 7
 Scan Head, 7, 25

—W—

Warranty, 2

—X—

XY10VM2
 Lens Mounting, 13
 Mirror Specifications, 26
 Mounting, 14
 Pin Configurations, 27
 Specifications, 25